


## Quick guide for File server using

Install and run [ZFPLabServer](#) as **Administrator**.

To test the commands, use the default location or change to custom **IN** and **OUT** folders.

Changing location can be done from Control panel tab.

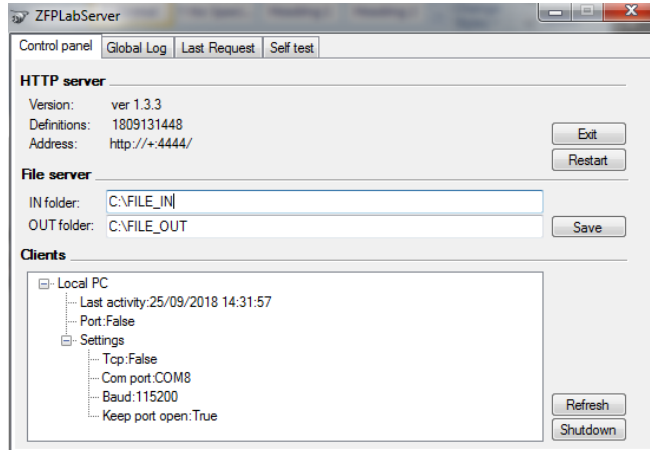

Test the example xml files by pasting them in [FILE\\_IN](#) folder.

1. Use "settings.xml" to set connection type / or settings\_com for COM port or setting\_TCP for TCP connection /

2. Use any other prepared example

Check results in [FILE\\_OUT](#) folder.